



To Adjust any setting simply scroll to the icon you desire by pressing enter once, press enter again once entered into setting desired and use the right button to change setting. As with any menu, when you have change set on the screen, press the left button to exit back to a previous menu or close the door.

6:1 Setting Pricing changes

We have a limited amount of settings for pricing. The default is set at 1 - \$0.50/ 5 - \$2.00. You can adjust the pricing to one of the following settings: \$0.50/3-\$1.00, \$0.50/ 12-\$5.00, \$0.50 only, \$1.00/6-\$5.00 or \$1.00 only. Follow the chart listed above to get to game pricing.

7:1 Free Play.

This is a no coin needed mode or home setting. The default for this is set to Off.

8:1 Free game.

This is a free game award for players who achieve a set score. The default is set to 0. The scores to be set ranges from 175-300. This mode is meant to give players a sense of achievement. If they acquire a set score they are awarded a free game.

9:1 High score settings.

In this menu you can shut off the display of high scores in attract mode. The default is set to On. It is not recommended to turn this mode off, if players can't see the leader board, they have nothing to shoot for and ultimately it may hurt earnings. The reset intervals are the amount of games set that the system will reset high scores automatically. The setting is defaulted off but should be set to a minimum of 250 games. The maximum is 250,000 games. If you don't want to wait for a minimum of 250 games for the system to automatically reset your high scores, you can reset them by game in the high scores menu at any time.

10:1 Ticket Settings.

Ticket redemption gives you the option to dispense tickets. The default is set off. Set regulation and 3-6-9 award levels is set for a single payout of a preset ticket amount at a score level. The payout will commence at games end. Payouts can start as low as 90 all the way up to 300.



Patrick Bohm